

170-230MHz 50W Class A High Performance Amplifier



- * 170-230MHz bandwidth
- SOdB typical gain
- +/- 0.3dB typical gain flatness
- Temperature-compensated bias
- S0 ohms input/output
- Disable pad
- Available with SMA connectors and/or heatsink and fan

Representative photo

The HD31370 is a Class A high performance amplifier, outstanding as a driver stage in analog or digital TV broadcast, or VHF communications systems. It exhibits excellent full power and back-off linearity, and utilizes a combination of three active device technologies for optimum performance and maximum ruggedness.

Specifications $V_{supply} = +28VDC$, $I_{DQ} = 6.9A$, $P_{out} = 50W$, $T_{base} = 25^{\circ}C$, $Z_{load} = 50\Omega$					
Parameter	Min	Тур	Max	Units	
Freq. Range	170		230	MHz	
P _{1dB}		>75		W	
Input Power		-3	0	dBm	
Gain	47	50		dB	
Gain Flatness		+/-0.3	+/-0.6	dB	
Drain Current		7.2	7.5	А	
Efficiency	24	25		%	
IRL		-22	-14	dB	
f ₂		-43	-34	dBc	
f ₃		-30	-24	dBc	
$\label{eq:started} \begin{array}{l} IMD_{3} \\ \text{50W PEP, } \Delta f = 10 \text{kHz} \\ \text{and } \Delta f = 100 \text{kHz}. \\ \text{See} \\ \text{Fig. 2 for 25W PEP.} \end{array}$		-39	-33	dBc	
Dimensions	2.75 X 5.60 X 1.00 (69.85 X 142.24 X 25.40)			inch (mm)	

Maximum Ratings Operation beyond these ratings may damage amplifier.				
Parameter	Value			
V _{supply}	24-28VDC			
Bias Current	6.9A			
Drain Current	8.0A			
Load Mismatch*	5:1			
Housing Base Temperature	65°C			
Storage Temperature	-40°C to 85°C			


*All phase angles, 50W forward power, current limited to 8.0A.

Option Ordering Info		
SMA connectors	HD31370-SMA	
Heatsink and fan	HD31370-HSF	

HD Communications Corp. • 332-C Dante Ct • Holbrook, NY 11741 USA Ph# (631) 588-3877 • Fx# (631) 648-0518 • <u>sales@rfcomp.com</u> • <u>www.rfcomp.com</u> Specifications contained herein are subject to change without notice.



170-230MHz 50W Class A High Performance Amplifier

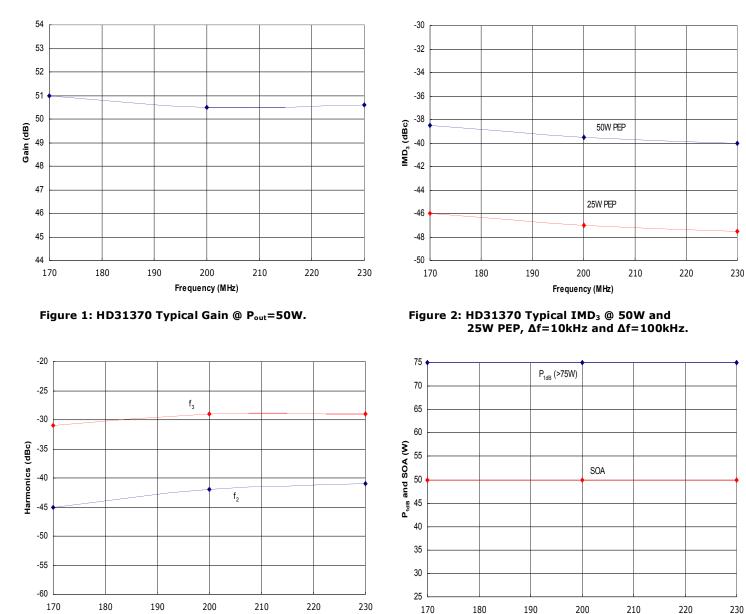

Frequency (MHz) Figure 3: HD31370 Typical f_2 and f_3 @ P_{out} =50W.


Figure 4: HD31370 Typical P_{1dB} and Safe Operating Area (SOA). The amplifier is capable of delivering much more power than it is safe to generate. Do not exceed the SOA shown above without first contacting HD Communications Corp. to discuss your application.

Frequency (MHz)

HD Communications Corp. • 332-C Dante Ct • Holbrook, NY 11741 USA Ph# (631) 588-3877 • Fx# (631) 648-0518 • <u>sales@rfcomp.com</u> • <u>www.rfcomp.com</u> Specifications contained herein are subject to change without notice.



Amplifier Mounting Hole and RF Locations

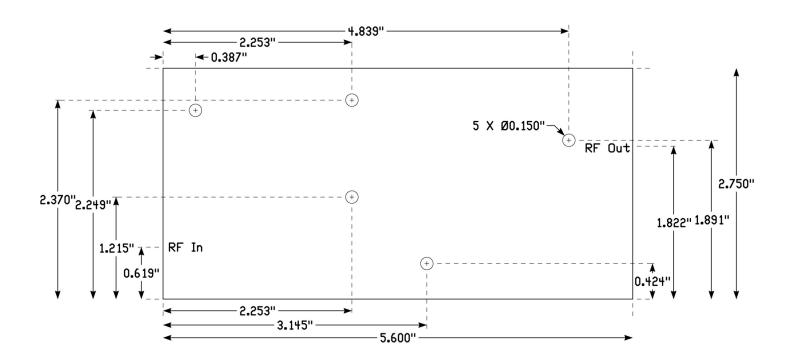



170-230MHz 50W Class A High Performance Amplifier

Instructions for Amplifier Use

- 1) If not supplied with a heatsink, apply a layer of high quality thermal grease (Wakefield Type 120 or equivalent) to the underside of the amplifier housing. Thinner is better, but ensure that when mounted to your heatsink, contact across the *entire* module base is made. Gaps and air bubbles will significantly reduce cooling, leading to possible amplifier damage. Use five #6-32 screws to mount the amplifier to your heatsink. *Although not required, a high performance thermal compound (Wakefield Type 122 or equivalent) may be used, and will enhance ruggedness and extend amplifier lifetime by reducing output transistor die temperature.*
- 2) Guarantee sufficient airflow through the heatsink fins to keep the maximum housing base temperature at or less than that specified in the Maximum Ratings section. Contact HD Communications Corp. for details on how to qualify your heatsink's performance, if needed.
- 3) Connect a proper signal source to the RF IN connector, and desired load to the RF OUT connector. Torque connectors to industry standards for the type supplied with the amplifier.
- 4) Connect DC V_{supply} and Ground wires to the terminal and pad provided. Ensure that the connections are of proper polarity, and within the voltage range in the Maximum Ratings section.
- 5) Apply DC power then sufficient RF drive to achieve desired output level. Ensure that the Safe Operating Area (SOA) power level indicated in Figure 4 is not exceeded, or amplifier damage may occur, and will void the warranty.
- 6) To disconnect the amplifier, first remove the RF drive, then DC power, then the RF connections.

Contact us at <u>sales@rfcomp.com</u> with any questions, or for special options, testing requirements, and/or operating conditions not specified in this document.

Document Control

Revision	Date	Notes
А	8-12-2016	Initial release.