

### 20-512MHz 100W Class A/AB High Performance Amplifier with High Speed Disable

- ❖ Class A/AB 100W 20-512MHz amplifier
- ❖ Fast output disable,  $\leq 1\mu\text{sec}$
- ❖ VVA, over 30dB range
- ❖ Analog temperature out
- ❖ High temperature alarm
- ❖ Temperature compensated bias
- ❖ Available with input limiter and/or heatsink and fan



The HD31343 is a Class A/AB high performance amplifier module, excellent as a driver stage in military communication or radar systems. It features fast output disable with  $\leq 1\mu\text{sec}$  response time. An independent MMIC disable line affords additional quieting of the RF chain. It utilizes a combination of three active device technologies for optimum performance and maximum ruggedness.

#### Specifications

$V_{\text{supply}} = +28\text{VDC}$ ,  $I_{\text{DQ}} = 1.6\text{A}$ ,  $P_{\text{out}} = 100\text{W}$ ,  $T_{\text{base}} = 25^\circ\text{C}$ ,  $Z_{\text{load}} = 50\Omega$

Parameter	Min	Typ	Max	Units
Freq. Range	20		512	MHz
$P_{1\text{dB}}$ See Fig. 4 for 30V performance.	90	110	See Fig. 4	W
Input Power		-3	0	dBm
Gain	50	53		dB
Gain Flatness		+/-0.7	+/-1.5	dB
Drain Current		7.0	7.9	A
Efficiency	45	51		%
IRL		-21	-14	dB
$f_2$		-33	-23	dBc
$f_3$		-17	-9	dBc
IMD <sub>3</sub> 100W PEP, $\Delta f=10\text{kHz}$ . See Fig. 2 for 50W PEP.		-30	-23	dBc
Dimensions	3.60 X 6.55 X 1.30 (91.44 X 166.37 X 33.02)			inch (mm)

#### Maximum Ratings

Operation beyond these ratings may damage amplifier.


Parameter	Value
$V_{\text{supply}}$	24-30VDC
Bias Current	2.0A
Drain Current	9.0A
Load Mismatch*	5:1
Housing Base Temperature	65°C
Storage Temperature	-40°C to 85°C

\*All phase angles, 24-28VDC, 100W forward power, current limited to 9.0A.


#### Option Ordering Info

Input limiter	HD31343-LIM
Heatsink and fan	HD31343-HSF


### 20-512MHz 100W Class A/AB High Performance Amplifier with High Speed Disable

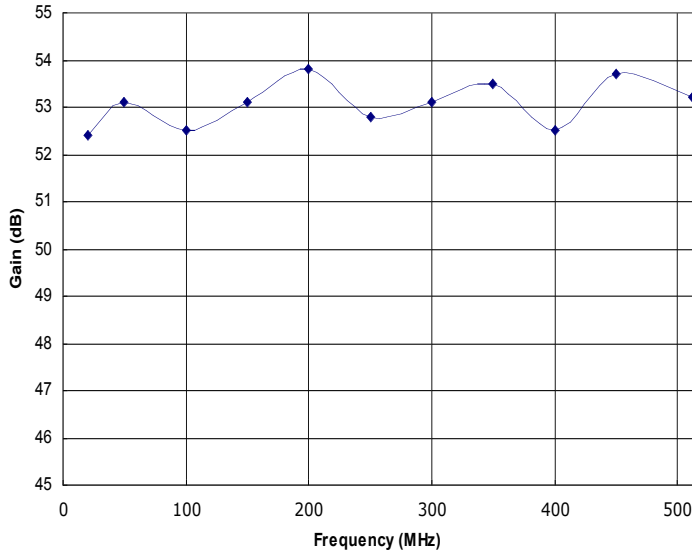


**Figure 1: HD31343 Typical Gain @  $P_{out}=100W$ .**

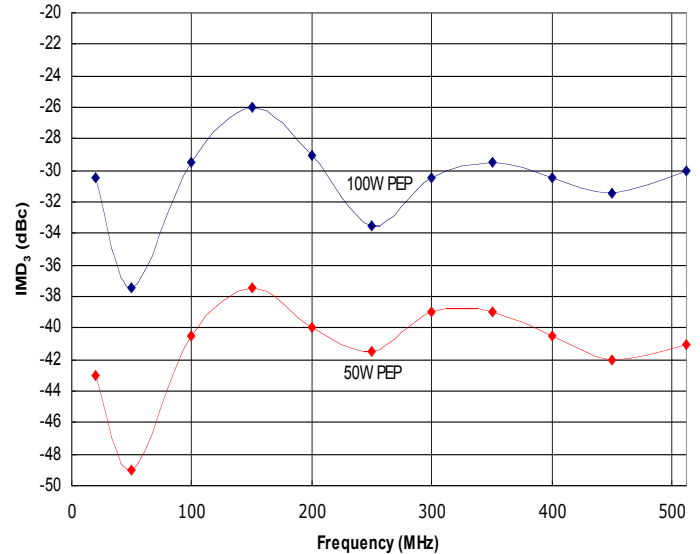

**Figure 2: HD31343 Typical  $IMD_3$  @ 100W and 50W PEP,  $\Delta f=10kHz$ .**

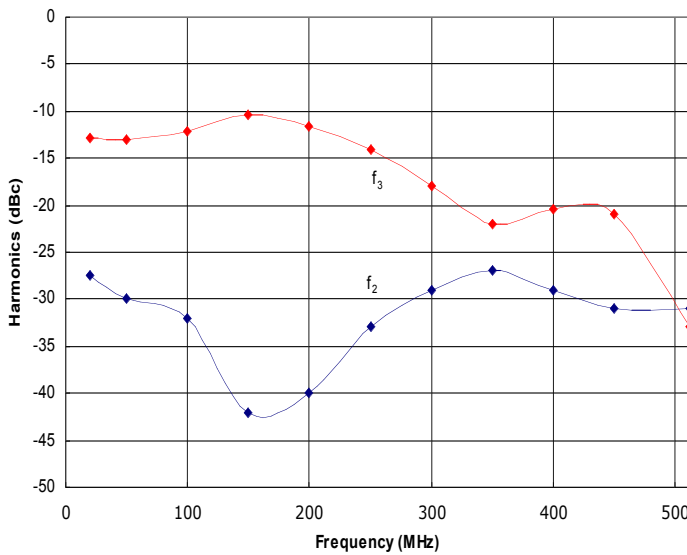


**Figure 3: HD31343 Typical  $f_2$  and  $f_3$  @  $P_{out}=100W$ .**

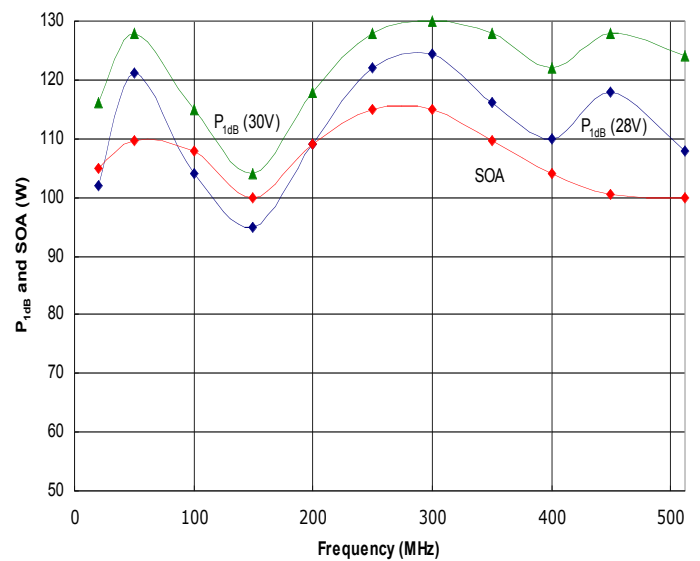

**Figure 4: HD31343 Typical  $P_{1dB}$  @ 28VDC and 30VDC, and Safe Operating Area (SOA). Do not exceed the SOA shown above without first contacting HD Communications to discuss your application.**

**20-512MHz 100W Class A/AB  
High Performance Amplifier  
with High Speed Disable**

**Amplifier Mounting Hole and RF Locations**

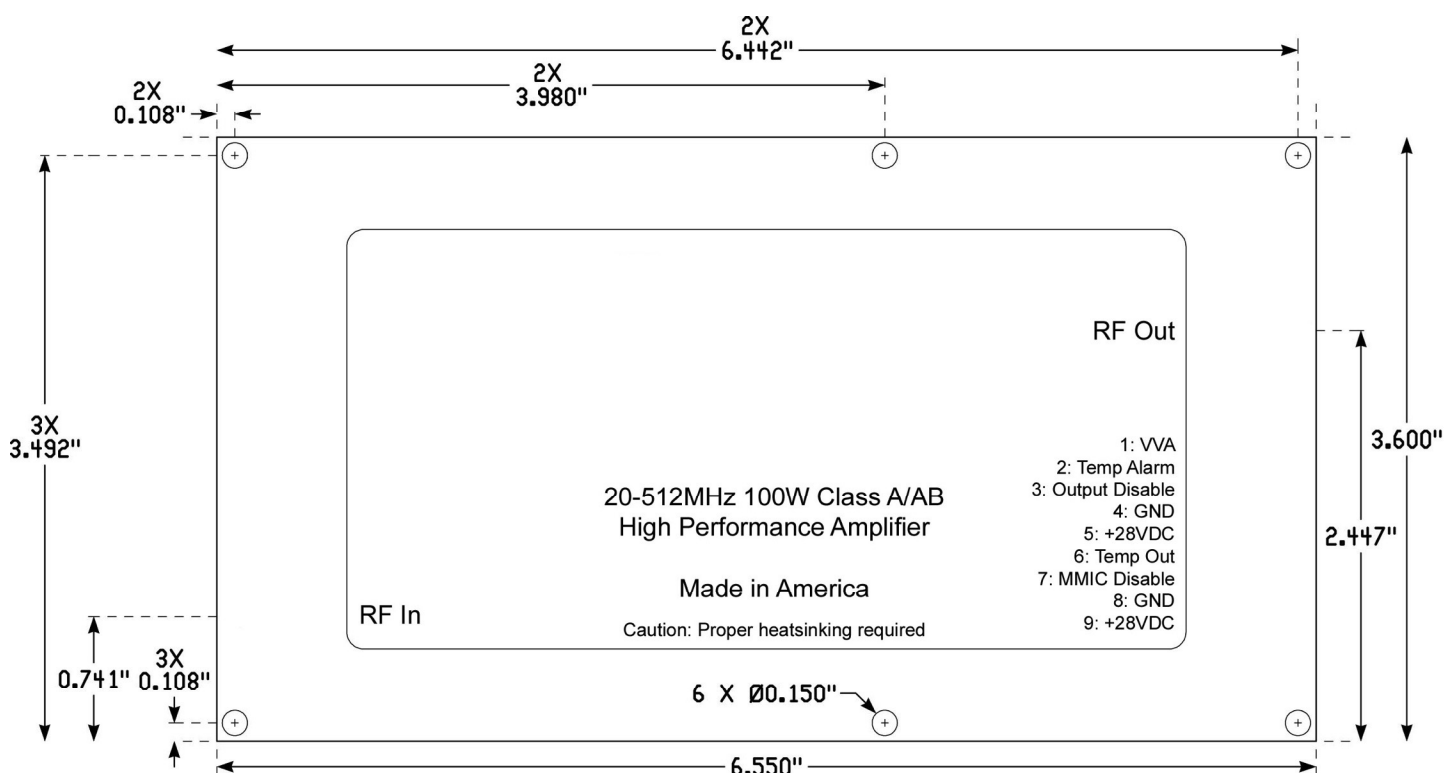

**20-512MHz 100W Class A/AB  
High Performance Amplifier  
with High Speed Disable**

## Interface Pins and Functions

- 1: VVA** The voltage variable attenuator has a slope of approximately 30dB/volt, from 0.65 to 1.65V. Maximum attenuation is reached by 2.0V. The acceptable control range is 0 to 3.6V. **Do not exceed 3.6VDC on this pin.** Maximum RF input power is +3dBm, without the limiter option. Do not exceed the SOA in Figure 4. The VVA control voltage should be set to zero volts during amplifier power up and power down.
- 2: Temp Alarm** This indicates an over-temp condition, and is set to trip at a housing base temperature of approximately +65°C. It is an open drain output, pulled up internally to +15VDC, and will pull down to 0V at +65°C. The end user may either scale this range to suitable voltages with a simple resistive divider, or use an analog or digital input capable of handling +15VDC. This signal exhibits 5°C of hysteresis, and will reset to +15VDC at approximately +60°C.
- 3: Output Disable** This is active high at +5VDC, and is TTL compatible. It disables the second and output stages of the amplifier, and will reduce full rated output power to zero in  $\leq 1\mu\text{sec}$ . When set to 0VDC, the amplifier will return to full power in approximately 50 $\mu\text{sec}$ .
- 4: GND** Amplifier ground. Connect to power supply return/ground. Use in parallel with pin #8. A minimum of 20 gauge wire is recommended.
- 5: +28VDC** Nominal supply voltage is +28VDC. As low as +24VDC may be used, with a reduction in  $P_{1dB}$  and IMD performance. Up to 30V may be supplied for extra  $P_{1dB}$  and improved IMD performance. Please refer to Figure 4. Use in parallel with pin #9. A minimum of 20 gauge wire is recommended.
- 6: Temp Out** This is an analog signal that is a nominal +0.75V at +25°C. It has a positive slope of 10mV/°C with increasing temperature. An offset will exist between the temperature reported on this pin and the actual housing base temperature directly under the output transistor. It is up to the end user to properly characterize this signal's response with their chosen cooling configuration.
- 7: MMIC Disable** This is a supplementary disable pin, for additional amplifier quieting at the user's discretion.
- 8: GND** Amplifier ground. Connect to power supply return/ground. Use in parallel with pin #4. A minimum of 20 gauge wire is recommended.
- 9: +28VDC** Nominal supply voltage is +28VDC. As low as +24VDC may be used, with a reduction in  $P_{1dB}$  and IMD performance. Up to 30V may be supplied for extra  $P_{1dB}$  and improved IMD performance. Please refer to Figure 4. Use in parallel with pin #5. A minimum of 20 gauge wire is recommended.

## Limiter Option

The limiter option significantly impacts amplifier linearity. Please contact HD Communications Corp. to learn more.



**HD31343**

**20-512MHz 100W Class A/AB  
High Performance Amplifier  
with High Speed Disable**

**Instructions for Amplifier Use**

- 1) If not supplied with a heatsink, apply a layer of high quality thermal grease (Wakefield Type 120 or equivalent) to the underside of the amplifier housing. Thinner is better, but ensure that when mounted to your heatsink, contact across the *entire* module base is made. Gaps and air bubbles will significantly reduce cooling, leading to possible amplifier damage. Use six #6-32 screws to mount the amplifier to your heatsink.
- 2) Guarantee sufficient airflow through the heatsink fins to keep the maximum housing base temperature at or less than that specified in the Maximum Ratings section. Contact HD Communications Corp. for details on how to qualify your heatsink's performance, if needed.
- 3) Connect a proper signal source to the RF IN connector, and desired load to the RF OUT connector. Torque connectors to industry standards for the type supplied with the amplifier.
- 4) Connect DC  $V_{\text{supply}}$  to pins 5 and 9 of the interface connector. Connect power supply return/ground to pins 4 and 8 of the interface connector. Ensure that  $V_{\text{supply}}$  is within the voltage range in the Maximum Ratings section.
- 5) Apply desired signals/monitoring lines to remainder of interface pins. Refer to the Interface Pins and Functions section for signal descriptions, limits, and timing requirements.
- 6) Apply DC power then sufficient RF drive to achieve desired output level. Ensure that the Safe Operating Area (SOA) power level indicated in Figure 4 is not exceeded, or amplifier damage may occur, and will void the warranty.
- 7) To disconnect the amplifier, first remove the RF drive, then DC power, then the RF connections.

Contact us at [sales@rfcomp.com](mailto:sales@rfcomp.com) with any questions, or for special options, testing requirements, and/or operating conditions not specified in this document.

**Document Control**

Revision	Date	Notes
A	8-1-2016	Initial release.